



## **Installation Guideline for Floating Aerator with Images**

1- Locate two floats side by side as illustrated below.



2- Attach the located floats to main chassis.







3- Please screw the bolt with double roves for nut and screw.



4- Final Picture of connected floats below.








5-Propeller protection apparatus







6- Connect main chassis to propeller protection apparatus.

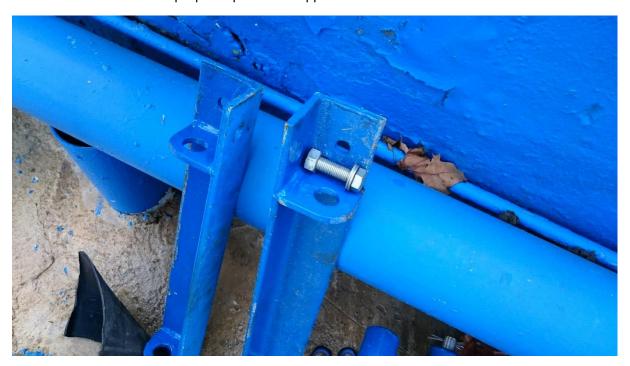







7- Final Picture of floating device chassis with propeller protection apparatus.



8- Lets start to connect aerator to floating device.







9- Start to open aerator box as below.



10- Aerator detached from box as below.







11- Connect the aerator to chassis with stainless steel screw. Then use curved apparatus to fix main chassis.
















12- Tie aerator to Crane with four connection hole. Then start to locate into pool.

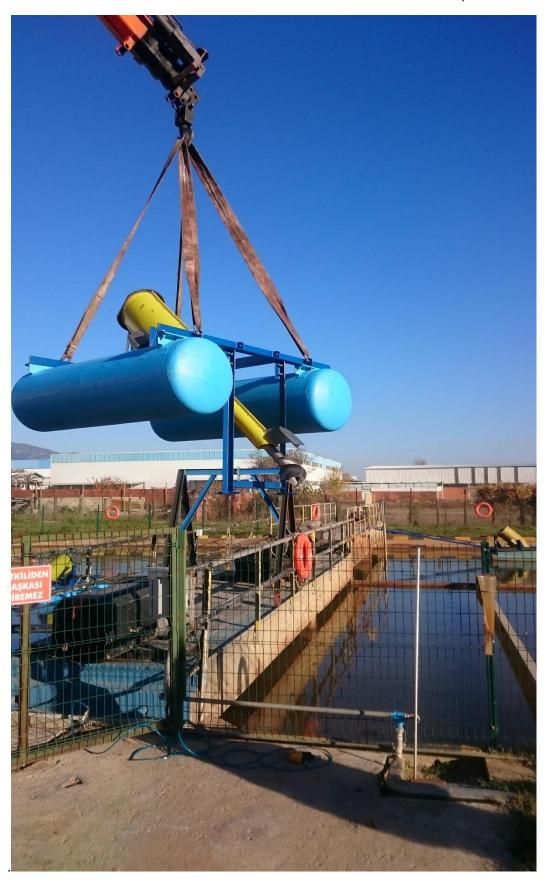





13- Connect floating aerator, ladder and concrete by using two detent pins.









14- By using curved apparatus make aerator veritifical as below and fix it.



15- Connect the elecricity cable as illustrated.







16- Finally control the direction of motor rotation.



It is ready to start.